※Please note that customers are responsible for any communication, connection, data charges etc from downloading this manual.

Ages 6 and above

© TOMY

TAKARA TOMY®

すみっコぐらし™

すみっコウォーター
Sumikko Water

Gameplay Manual

Wonderful! When turned upside down Actual Water appears!

⚠ This product is already filled with water. The water inside cannot be removed or replaced. Never disassemble, deform, or modify the main unit extract or fill the water, as it may cause a malfunction.

※If the screen is cloudy or water droplets or bubbles do not disappear, please refer to ? on Page 11.

単4形アルカリ乾電池3本使用
(電池は別売りです。)
REQUIRES 3 LR03("AAA"SIZE)BATTERIES (NOT INCLUDED)

●写真やイラストはイメージです。実際の商品とは異なる場合があります。

©2022 San-X Co., Ltd. All Rights Reserved.

Set Contents

※Check that the set contents are complete.

x1 Sumikko Water Device x1 User Manual
x1 Reversible Faceplate Sheet (pre-installed in the device)

⚠ Nothing else is included aside from the above contents.

Body Size	Approx W91mm x H105mm x D37mm
LCD	1.44 inch TFT LCD
Resolution	LCD display 128 x 128
Continuous use time	Approx 6 hours with fresh alkaline batteries (Depends on usage)

くちにいれない

⚠ WARNING

Parents, please read

The device contains small parts. Not suitable for children under the age of 3 as it may pose a choking hazard.
The device contains liquid, so please do not put it in the freezer compartment.

⚠ NOTICE

Please read the attached instruction manual carefully before use. Avoid using it for a long time, and take a proper rest. Do not play in the dark. Do not use while walking to avoid risk of unexpected accidents. Keep out of reach of children under the age of 3. Do not cover your head or face with a plastic bag.
Batteries may generate heat, explode, or leak. Please note the following: Never use rechargeable batteries. Do not mix old and new batteries or different types of batteries. Set the + & - correctly. Be sure to remove the batteries when you do not play for a long time. Do not short-circuit, charge, disassemble, heat or put in fire. Should the liquid leaking from the battery get into your eyes, immediately wash your eyes with plenty of water and consult a doctor. If it gets on your skin or clothes, wash it off with water.
When disposing of the product, please follow the instructions of the local government for waste disposal.

English Manual Translated by Rachel Liew for Fuzzy N Chic
(original Japanese copy: https://www.takaratomy.co.jp/products/sumikko/goods/pdf/sumikkowater_manual.pdf)
www.fuzzy-n-chic.com
Your one stop shop for all your Tamagotchi needs

1 Name of Parts

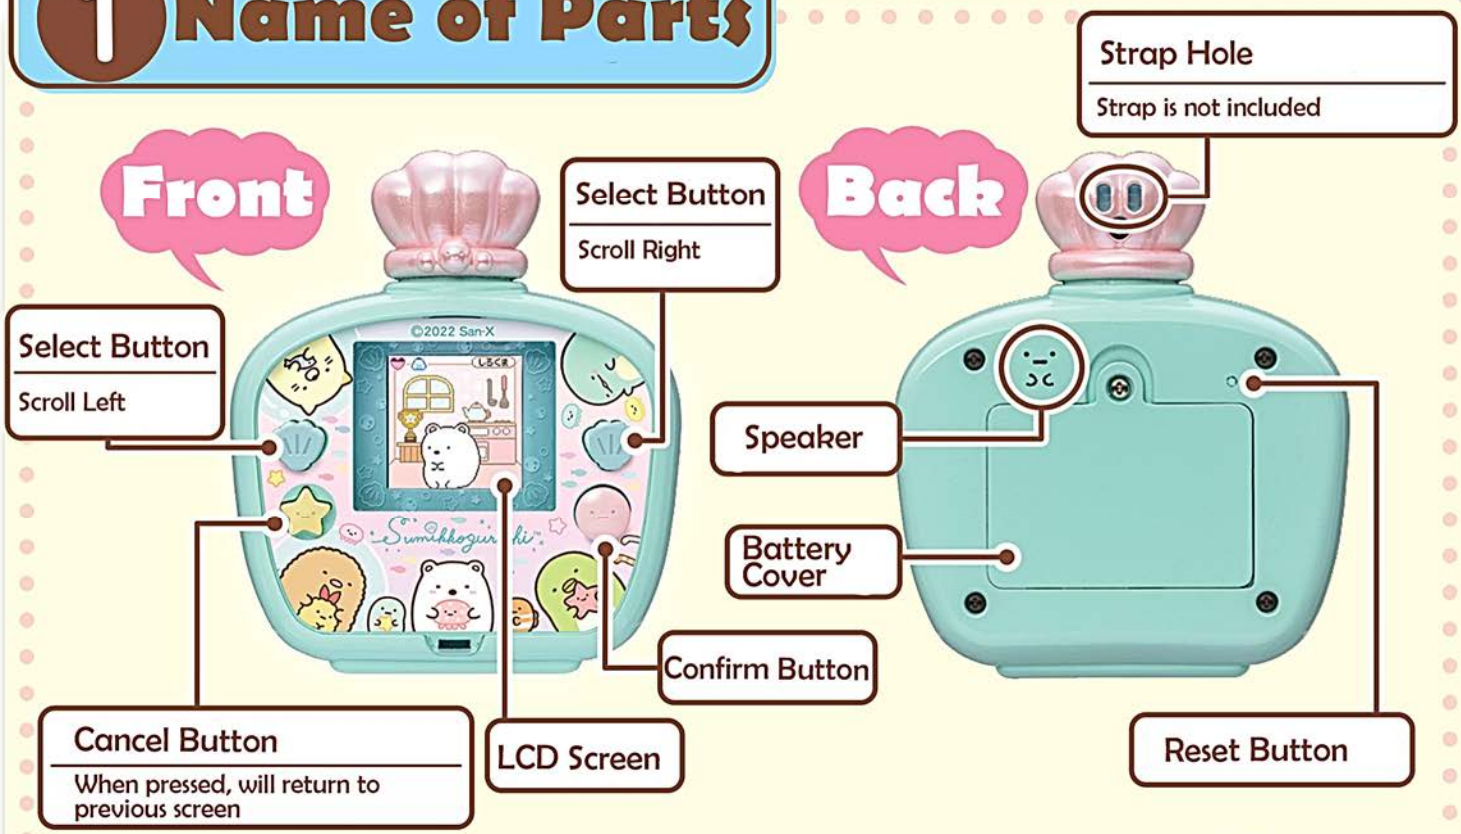

Reversible Faceplate Sheet

When the transparent cover is removed, the faceplate sheet can be changed.
When closing it, fit the protruding part on the top of the transparent cover and push lightly.

Please note that there may be some line marks on the transparent cover, but this might be caused during the manufacturing process and is not a scratch.

Screen On & Off

- Press Confirm Button for approx 3 seconds - Screen On
- Press Confirm Button for approx 3 seconds - Screen Off

※If no button is pressed for approx 1 min, screen will automatically turn off

Reset Device

After changing the battery, lightly press the Reset Button with a thin stick.

※Even if the Reset Button is pressed, the saved data will not be deleted

2 Before Playing

Insert Batteries

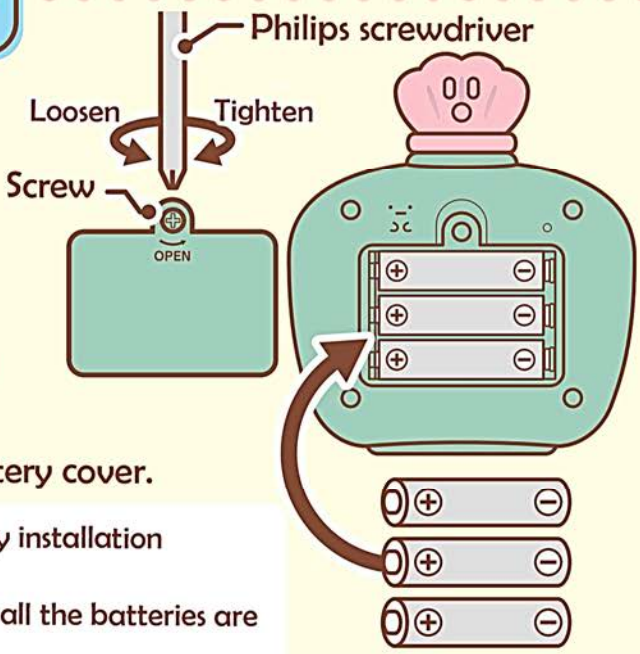

1. Use a Philips screwdriver to open the battery lid on the back of the device.
2. The device uses 3 AAA alkaline batteries. Make sure they are aligned according to the + and - signs.
3. Use a screwdriver to reattach the battery cover.

- Have a guardian perform the battery installation
- Please use new alkaline batteries.
- When changing batteries, make sure all the batteries are new.

Time to Change Batteries

- When the image on the right is displayed, change the batteries.
- When the volume becomes soft or when the screen becomes dark, please change the batteries.

※ After inserting the batteries, press the Reset Button

3 Initial Settings

Set Date

1. Firstly, set the year. Press the left and right Select Buttons to set the year, then press the Confirm Button.
2. Set the month and day the same way.

Set Time

1. Firstly, set the hour. Press the left and right Select Buttons to set the hour, then press the Confirm Button.
2. Set the minutes the same way.

※ If you wish to go back to the previous step, press Cancel Button once.

4 Lets Play!

Standby Screen

The time and date that you have set is indicated here.

Date is displayed here

Time is displayed here

Press the Confirm Button to go to 5 Main Menu!

※ The Cancel Button can't be used on Standby Screen

Device is upright

The screen is in **Land Mode**.

※ When Confirm Button is pressed, you can enter the respective Sumikko's rooms.

※ Please note that water inside the device may decrease over time, but it will not affect the gameplay.

Device is upside down

The screen is in **Water Mode**.

※ Press the Confirm Button to make the time and date indication appear or disappear.

When the Standby Screen is in Water Mode, the sumikkos will be swimming!

When turned upside down Actual Water appears!

※ Please note that water in front of the LCD screen may enter and the light from the screen may be reflected in the aquarium, making it look like a vertical line.

※ If the screen is cloudy or water droplets or bubbles do not disappear, please refer to **In these situations...** on Page 11 for details.

On the standby screen during Land Mode, these may happen!

Huge dust ball...!?
(Refer to Page 7: **Clean**)

Minikkos might come to play in Sumikko's room!

Sumikkos are sleeping between 8pm to 5.59am.

Sumikko has disappeared...!?
(Refer to Page 7: **If they're not being cared for...**)

5 Main menu

When you press the Enter button on the Standby Screen, the Main Menu appears.
Select the options with the Select Button then press the Confirm Button.

Land Mode

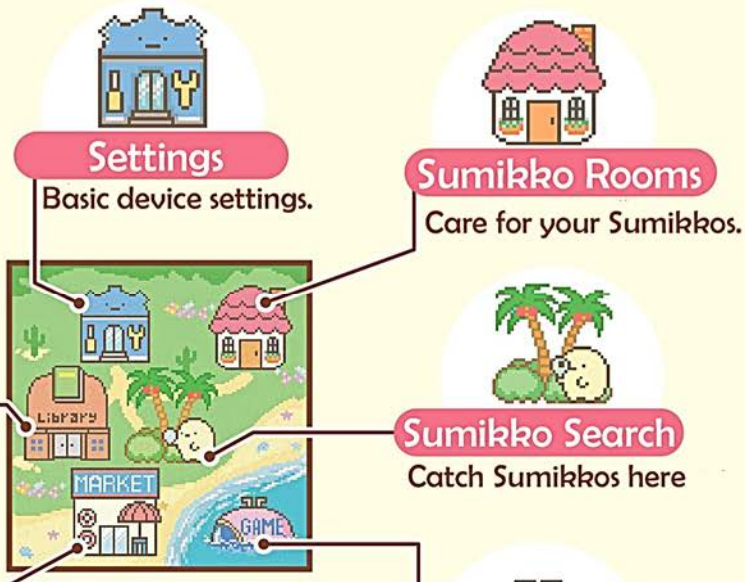

Settings
Basic device settings.

Sumikko Rooms
Care for your Sumikkos.

Library
Check the Sumikkos and items that you have collected.

Sumikko Search
Catch Sumikkos here

Sumikko Market
Go shopping here.

Mini Games
Play Mini Games here.

Water Mode

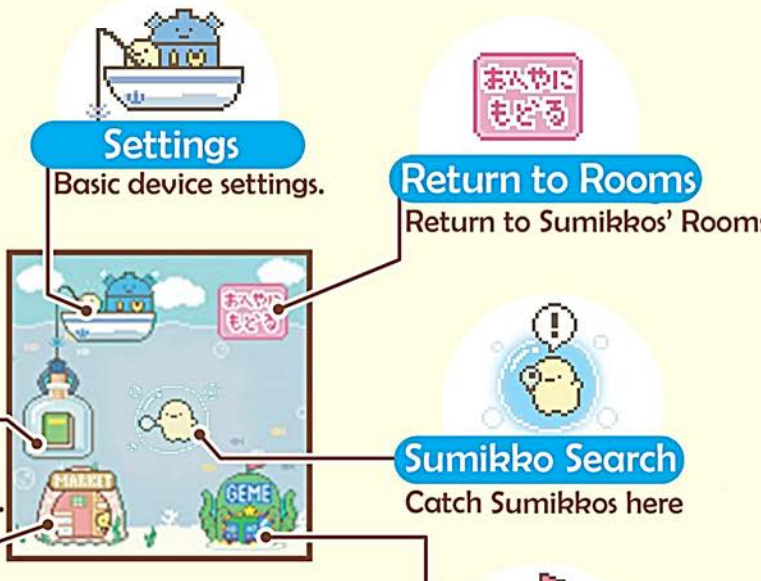

Settings
Basic device settings.

Return to Rooms
Return to Sumikkos' Rooms

Library
Check the Sumikkos and items that you have collected.

Sumikko Search
Catch Sumikkos here

Sumikko Market
Go shopping here.

Mini Games
Play Mini Games here.

Press Cancel Button on this screen, to return to the Standby Screen.

Sumikko Rooms

- **Sumikko Rooms** can be accessed in **Land Mode**
- On the Main Menu **Water Mode** if **Sumikko Rooms** is selected, turn the device right side up to enter **Land Mode**

After selecting **Sumikko Rooms** from Main Menu, if you press left and right on the Select Buttons, you can visit the following rooms.

Shirokuma's Room | Penguin?'s Room | Tonkatsu's Room | Neko's Room | Tokage's Room

Friendship Icon & Satiety Icon

The icons display the Sumikko's current status

Increase the friendship level by taking care of them.

Increase the satiety level by feeding of them.

Everyone is gathered in 1 room!

Let's visit Sumikkos in their rooms!

Press the Confirm Button in Sumikko Rooms to bring up the **Care Menu**. Scroll left and right using the Select Buttons to choose the type of care, then press Confirm Button.

Food

Clean

Bath

Clothes

Pet

Press the Cancel Button to return to Sumikko Rooms.

If you care for them a lot, you can unlock new clothes!

Food

You can feed Sumikkos with the food you have obtained or bought.

Press the Left & Right Select Buttons to choose the food you wish to feed, then press Confirm Button. Select あげる and press Confirm Button again, and Sumikko will eat it!

Sumikkos will react towards their food with "Like", "Neutral" or "Dislike"!

Try to find out what each Sumikko likes to eat! Sumikkos won't eat if they are full or if they dislike the food.

- Foods that are marked [?] will not be able to be selected until you obtain them from **Sumikko Market**.
- Pancake will not need to be bought and can be fed infinitely. All other food will decrease as you feed them.

Clean

If dust balls appear in the room, clean it.

Turn the device upside down. If you do not clean for a long time, huge dust ball may appear!?

While in Water Mode, shake the device to clean the room! Turn your device back upright and cleaning is complete!

Bath

If Sumikkos become dirty, bring them to the bath.

Turn the device upside down.

While in Water Mode, press the Select Button repeatedly to bathe! Turn your device back upright and bathing is complete!

Clothes

You can change Sumikkos' clothes.

Choose the item you want to wear with the Select Button, then press the Enter Button.

Select さがえる and press the Confirm Button to complete the change!

※ If you want to remove the clothing, select ない and press the Confirm Button.

Pet

You can pet Sumikkos to increase their friendship.

Mash the Confirm Button to give Sumikko lots of pets!

If you pet it a lot, Sumikko will be glad!

Sometimes Sumikkos will ask for attention!

Sumikko will comes up close to the screen to ask for care. Pay attention to the speech bubble and care for it accordingly.

If they're not being cared for...

If you ignore the Sumikkos, they will leave the room. If there is a note from Sumikko on the Standby Screen, select さがしにいく to search for them!

"I have gone out to search for another corner... Neko"

Sumikko Search

- **Sumikko Search** can be accessed in **Land Mode**
- On the Main Menu **Water Mode** if **Sumikko Search** is selected, turn the device right side up to enter **Land Mode**

Catch Sumikkos with Land & Water traps!

By using Trap Items, you can catch various Sumikkos and Minikkos!

① Choose the trap you wish to use by pressing the left and right Select Buttons, then press Confirm button.

- Items marked [?] cannot be used until they are obtained from **Sumikko Market**.
- Arm/Claw trap item does not need to be bought and can be used infinitely. All other trap items will decrease as you use them.

② After installing the trap item selected in ①, a Sumikko will appear.

③ One of the following action marks will be displayed in the upper left of the screen, so take the right action at the right time.

Press!	Press either the left or right Select Button
Mash!	Mash the left or right Select Button Continuously! (You can also press the left and right Select Buttons alternately)
Tilt!	Tilt the device in the direction of the arrow!
Shake!	Shake the device!
Upside Down!	Turn the device upside down! ※ When もとにもどしてね! is displayed, turn it back the right side up.

Sumikkos that can only be caught by a specific trap!?

There might be some Sumikkos that can only be caught by a specific trap...?
Try using various different traps and aim to complete the **Sumikko Collection** book in the **Library**!

Success!

You will obtain a Sumikko! It be registered in the **Sumikko Collection** book in the **Library**

Failure...

If you don't get the timing right, Sumikko will escape. Challenge yourself and try again!

This might happen...!

Occasionally you may also obtain special characters! When ① appears, try shaking the device.

Mini Games

- Could be played either in **Land Mode** or **Water Mode** from Selection Screen.
- Depending on the game, some start in **Land Mode** and some start in **Water Mode**. Follow the on-screen instructions to switch modes.

Play 6 different games! Choose the game you want to play with the Select Button and press the Enter Button. The game title will be displayed. If you select スタート, the game will begin. If you select せつめい, a short description of the game will be displayed.

※ For your safety, do not walk while playing.

- There are some games that won't start unless the device is held upright.
- Aside from **Fortune Telling After the Rain**, all other games have 3 difficulties (Easy: かんたん, Normal: ふつう, Diffficult: むずかしい) that you can choose from.

Tokage Hide & Seek

Tokage is peeking out of the water! Dive back underwater before Penguin? and Tonkatsu turns around!
Tilt the device to the right to submerge underwater!
The breathing meter will decrease while submerged in water. Don't let Tokage get out of breath!

Floaty Water Ring

Keep Shirokuma in a horizontal position and get him off the sea safely with a float! If Shirokuma is about to turn over, tilt the device in the direction of the arrow according to the message かたむけて! followed by まっすぐにして to return to original position.
Watch out for fish!

Neko's Rod Toppling

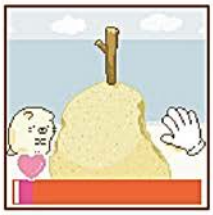

Challenge Rod Toppling with Neko! When the bar reaches the red mark, press the Select Button! When there is a long red mark, hit the Select Button repeatedly!

Hula Dance

When ♪ that is flowing from the right reaches ○, press the Select Button! Sumikko will do a hula dance! When ↻ reaches ○, turn the device upside down!

Pitter-Patter Watermelon Split

Use programming to move Shirokuma to the watermelon and split it! Scroll through the direction arrows with the Select Button and confirm with the Confirm Button.
Enter Shirokuma's direction!
Select OK and Shirokuma will start moving! If the path is long, tilt the device left & right to see where the watermelon is!

※ The description of this game is 2 pages long. To read the 2nd page of the description, press the Confirm Button.

Fortune-Telling After the Rain

When you turn the device upside down, it will start raining! When the rain stops, you'll see your fortune today!

※ Fortune-telling results do not guarantee the future.

After clearing the mini game, you will obtain SumiCoins! The number of SumiCoins you earn depends on the difficulty level and your performace in the game. Let's play a lot and earn a lot!

Sumikko Market

Sumikko Market can be accessed via both **Land Mode** and **Water Mode**.

You can buy **Food Items** to be used in **Sumikko Rooms** and **Trap Items** to be used in **Sumikko Search**.

① You can choose whether to purchase **Trap Items** or **Food Items**.

② After choosing the item that you wish to buy, press the Confirm Button.

③ After selecting the number of that item to buy, select かう and press Confirm Button.

Sometimes, the Money Claw may make an appearance...!

Library

- **Library** can be accessed in **Land Mode**
- On the Main Menu **Water Mode** if **Library** is selected, turn the device right side up to enter **Land Mode**

At the Library, you can check the following picture books.

Sumikko Collection — You can view the Sumikkos & Minikkos that you have caught.

Trap Item Book — You can view all the Trap Items that you have bought or obtained so far.

Food Item Book — You can view all the Food Items that you have bought or obtained so far.

Sumikko Collection

① Use the Select Button to choose the Sumikko type, then press the Confirm button to check for each character.

② Use the Select Button to choose the Sumikko you want to view, then press Confirm Button to view the full screen illustration. Press the Select Button to scroll to view the next illustration.

Trap Item Book

Use the Select Button to choose the item you want to view, then press Confirm Button. you can also read the description of each item.

Food Item Book

Use the Select Button to choose the item you want to view, then press Confirm Button. you can also read the description of each item.

Settings

You can change time, date, volume, screen brightness, and erase game progress data here. Use the Select Button to choose the icon, then press Confirm Button.

Date

Similar to Initial Settings on Page 3, you can set today's date here

Time

Similar to Initial Settings on Page 3, you can set the current time here

Brightness

You can set the screen's brightness level from 1 to 5.

Volume

You can set the volume level from 0 to 5. Level 0 is mute.

The initial settings of Brightness & Volume are at level 3.

Password

You can input passwords here to obtain special Sumikkos! Passwords are released in magazines and website. Check Takara Tomy's website for more details.

More Info Takara Tomy Sumikko Water Search

When special Sumikkos are obtained, **Special Encyclopedia** will appear in the Library!

Reset

You can erase your game progress here. Select はい twice and all game data will be erased.

Notice | Erased game data cannot be recovered. Do not reset unless necessary.

In these situations...

● Device not turning on

Even if the battery replacement screen does not appear, the battery may be dead. Follow the instructions on Page 3 on how to insert/change batteries.

● Screen has no display, unresponsive, or looks funny

Press the Confirm Button for 3 seconds. If it still can't be fixed, follow the instructions of **Reset Device** on Page 2 and press the Reset Button correctly.

● The screen is foggy, water droplets or bubbles do not go away

Slowly turn over the device a few times repeatedly, and the cloudy water droplets will disappear. If the bubbles does not disappear easily, do not shake the device and leave it for a while before using. Please note if the humidity is too high or too low, condensation will easily occur in the water tank.

Passwords

[Published in July 2022]

[Released in October 2022]

[Released in November 2022]

せっていモードから
入力画面を開いて
このパスワードを入れてね！